


Mojo Luxe

Assembly Instructions

No.	Item	Specification	Q' ty	Remarks
A	Seat Body	Standard	1set	1. Attach both left and right Armrest (B) onto the bottom side of Seat Cushion (A) by using 4pcs of Screws (G) with 8pcs of Washers (H).
B	Chrome Arm	Standard	1pair	
C	Mechanism	Standard	1pc	
D	Aluminum Base	350mm	1pc	
E	Cylinder	6cm/165/35	1pc	2. Insert the Cylinder (E) into the center holes on the top of Aluminum Base (D).
F	Cover Tube	6cm	1set	3. Cover the Cover Tube (F) onto the Cylinder (E).
G	Screw	M8*45mm	4pcs	4. Insert the pre-assembled seat body with arms aggregation unit onto the Cylinder to finish the assembly.
H	Washer	M8	8pcs	
I	Caster	50/38	5pcs	

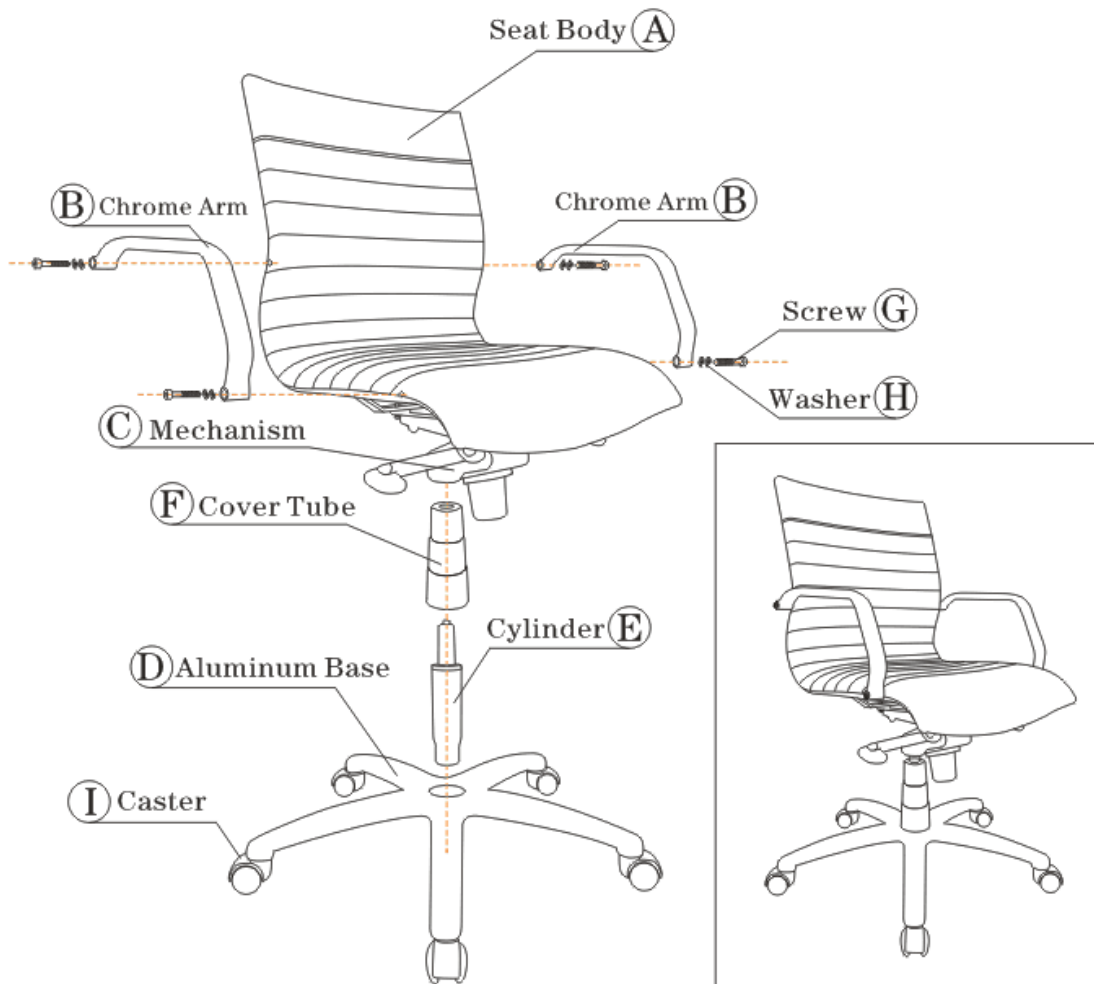

NOTES

Check to be sure that you have all parts and hardware.
 Remove all wrapping materials, including staples and packing straps before you start to assemble.
 Keep all hardware parts out of reach of children.